

IPK II - PROGRAMMING SYSTEM SPEED DIAL

1. Press the **Speaker** key.
2. Dial **753** (for system) or **754** (for group).
3. Dial system or group storage code.

Note: Initially (Default), there are 1000 System Speed Dialing codes (000~999). There are Group Speed Dialing codes only if assigned in programming.

4. Dial the Access Code (e.g, 9) - if required.
5. Dial telephone number you want to store (up to 24 digits).

Note: Valid entries are 0~9, # and *. To enter a pause, press **MIC**. To store a Flash, press **Recall**.

6. Press **Hold**.
7. Enter the name associated with the Speed Dialing number (display telephones only):

| Key for Entering Names | |
|-----------------------------|--|
| Use this keypad digit . . . | When you want to . . . |
| 1 | Enter characters: 1 @ [¥] ^ _ ` { } → ← Á À Ã Ä Ç È É Ì Ó |
| 2 | Enter characters A-C, a-c, 2 |
| 3 | Enter characters D-F, d-f, 3 |
| 4 | Enter characters G-I, g-i, 4 |
| 5 | Enter characters J-L, j-l, 5 |
| 6 | Enter characters M-O, m-o, 6 |
| 7 | Enter characters P-S, p-s, 7 |
| 8 | Enter characters T-V, t-v, 8 |
| 9 | Enter characters W-Z, w-z, 9 |
| 0 | Enter characters: 0 ! " # \$ % & ' () ò ñ ú û ä å ö ü ø ε θ |

| Key for Entering Names | |
|-----------------------------|--|
| Use this keypad digit . . . | When you want to . . . |
| * | Enter characters: * + , - . / : ; < = > ? π Σ σ Ω ∞ φ ε |
| # | # = Accepts an entry (only required if two letters on the same key are needed - ex: TOM). Pressing # again = Space. |
| Conf | Clears the character entry one character at a time (used when entering the Name). |
| Exit | Clears all the entries from the point of the flashing cursor and to the right (used when entering the Number, this clears both the number and name). |

8. Press **Hold**.
9. Press the **Speaker** key to hang up.