

IPK - PROGRAMMING SYSTEM SPEED DIAL

1. Press the **Feature** key.
2. Press the **Redial** key.
3. Dial the System Speed Dial Memory location **00 ~ 79**.
4. Dial the trunk access code, i.e. **9** (if necessary).
5. Dial the telephone number to be stored (24 digits maximum).
6. Press the **Hold** key (if entering name) and dial the name of the party (13 characters maximum).
7. Press the **Feature** key again.